


ANTI-THEFT

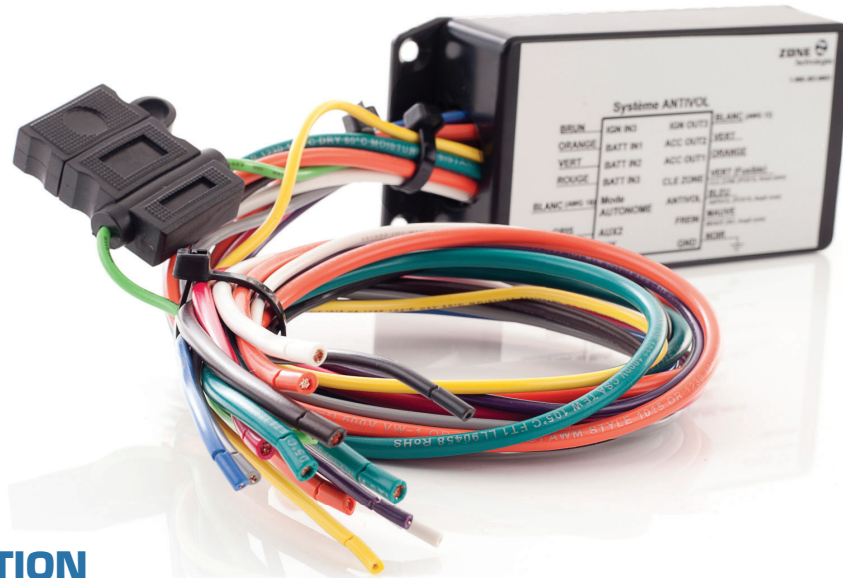

DESCRIPTION

- ▶ This module allows users to let the engine run after removing the key from the ignition so as to prevent the discharge of the battery when emergency features are activated.
- ▶ The vehicle automatically stops when pressure is detected on the brake pedal, preventing any change of the transmission.
- ▶ Works on many brands and models of vehicles.

FEATURES

- ▶ Assembled in a robust housing
- ▶ Can be adapted to any kind of vehicle
- ▶ Includes 3 relays (30A)
- ▶ Ignition signal protected by an external 3A fuse
- ▶ Can be turned on manually or automatically
- ▶ Autonomous or integrated mode on emergency systems
- ▶ Harness included (no plug required)
- ▶ Fully welded (no seamed component)
- ▶ Also available for the Dodge Charger (ANTCH)

ELECTRICAL SPECIFICATIONS

Operating Voltage:	10 to 18Vdc
Operating Temperature:	-40°C to 75°C (-40°F to 167°F)
Maximum Current Draw:	400mA

PRODUCT NUMBERS

Number	Description
ANTV	ANTI-THEFT MODULE
ANTI-THEFT-DODGE	ANTI-THEFT MODULE FOR DODGE VEHICLE (CHR & RAM)