

# MICRO-BAR-EXD

## OPERATIONS

This minibar is designed with 2 sets of memory (Memory1 and Memory2) to allow the user to instantly switch from one configuration to another by:

- pushing the momentary switch on the cigar-plug or
- applying +VDC to BLUE wire for permanent mount units.



Each Memory's flash pattern and color mode can be independently programmed. Follow the following steps to configure each Memory:

1. While Memory1 is active, apply BLUE wire to +VDC for more than 3 seconds to enter Programming. Once in programming, the unit will flash in low power.
2. While in programming, apply BLUE wire to +VDC for:
  - less than 1 second to change Flash Pattern. (refer to Flash Patterns chart)
  - more than 1 second to change Color Mode. (refer to Color Modes chart)
3. Once desired configuration is set, disconnect all power to exit programming.
4. To configure Memory2, select Memory2 and repeat the above steps.

**WARNING:** Do not look directly into LEDs while in operation; may cause momentary blindness and/or eye damage.

FP#	Flash Patterns	FP#	Flash Patterns	FP#	Flash Patterns	FP#	Flash Patterns
1	Random	7	Quint (split)	13	Double (all) (SAE)	19	Single H/L (all)
2	Rotating (slow)	8	Mega (split)	14	Quad (all) (SAE)	20	Steady 2 (half)
3	Rotating (fast)	9	Ultra (split)	15	Quint (all) (SAE)	21	Single (2Hz)
4	Single (split)	10	Single-Quad (split)	16	Mega (all)	22	Double (2Hz)
5	Double (split)	11	Single H/L (split)	17	Ultra (all) (SAE)	23	Triple (2Hz)
6	Quad (split)	12	Single (all) (SAE,CA13)	18	Single-Quad (all)	24	Quad (2Hz)

**Note:** This unit may not factory set at FP#1.

Color Modes	
Mode1 All Color 1	
Mode2 All Color 2	
Mode3 All Color 1 alternate All Color 2	
Mode4 Half Color1/ Half Color2	
Mode5 Half Color1/ Half Color2 (in-N-out)	

**Note:** Memory1 is pre-set at Color Mode1, Memory2 is pre-set at Color Mode2.

## MAGNETIC MOUNT




Dual button cigar-plug.



**WARNING:**

It is not recommended to use magnetically mounted warning devices on vehicles in motion. Usage is at the sole risk and responsibility of the user.

## MAGNET MOUNT

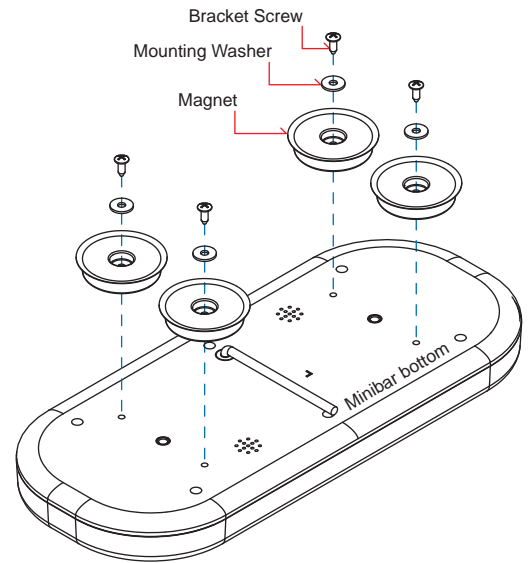

## PERMANENT MOUNT




**RED:** To +VDC (fuse @ 8A)

**BLACK:** To Chassis Ground (-)

**BLUE:** Memory change & Synchronization

- Momentarily apply BLUE to +VDC for Memory change
- Connect BLUE wires of all minibars together for synchronization; all units must be set at the same pattern

## SINGLE-BOLT MOUNT BRACKET

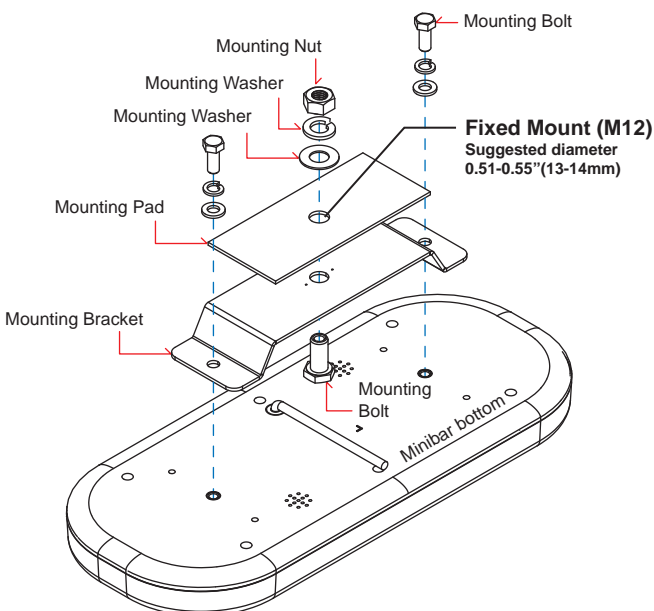

## 4-BOLT MOUNT BRACKETS

